

LIMITED WARRANTY

WEESTA LTD warrants to the original consumer or purchaser, this Air Fryer Countertop Oven is free from defects in material or workmanship for a period of One (1) year from the date of purchase. If any such defect is discovered within the warranty period, WEESTA LTD at its discretion will repair or replace the Product at no cost. This limited warranty is good only for the original purchaser of the product and effective only when used in the United States.

For warranty or repair service, Email: Service@weesta.net. Please have your Product's model number, your name, address, city, state, zip code, and phone number ready.

NO OTHER WARRANTY IS APPLICABLE TO THIS PRODUCT. THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS, OR IMPLIED. INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW. IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S. DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE INCLUDING WITHOUT LIMITATION. LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT OR OTHERWISE, SOME STATES AND/OR TERRITORIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU THE ORIGINAL PURCHASER, SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR TERRITORY TO TERRITORY.

THIS LIMITED WARRANTY DOES NOT APPLY TO

- 1.Failure of the product to perform during power failures and interruptions or inadequate electrical service.
- 2.Damage caused by transportation or handling.
- 3.Damage caused to the product by accident, vermin, lightning, winds, fire, floods, or acts of God.
- 4.Damage resulting from accident, alteration, misuse, abuse, or improper installation, repair, or maintenance. Improper use includes using an external device that alters or converts the voltage or frequency of electricity.
- 5.Any unauthorized product modification, repair by an unauthorized repair center, or use of non-approved replacement parts.
- 6.Abnormal cleaning and maintenance as described in the user's manual.
- 7.Using accessories or components that are not compatible with this product.

The cost of repair or replacement under these excluded circumstances shall be borne by the consumer.

Need help? Contact Customer Support
Service@weesta.net

WEESTA

120V~ 60Hz 1500W



KA23W EVERYDAY AIR FRYER OVEN

Instruction Manual

Please read these instructions thoroughly before using this appliance, and save it for future reference.

Customer Service Email: Service@weesta.net

EVERYDAY AIR FRYER OVEN

Important Safeguards	3-4
Parts & Features	5-6
Using Your Everyday Air Fryer	7-8
Air Frying	9
Grilling/Defrost	10
Baking and Toasting	11
Broiling/Convection Broiling	12
Convection	13
Recommended cooking guide	14
Tips for daily use	14
Cleaning & Maintenance	15
Troubleshooting	15
Warranty	16

Maintenance and Cleaning

NOTE: Always allow the Air Fryer Oven to cool completely before cleaning. Always unplug the Air Fryer Oven from the electrical outlet before cleaning.

- To remove crumbs, take out the crumb tray and discard crumbs. To remove stubborn grease, sink the crumb tray in hot and sudsy water and wipe it with a soft sponge.
- Do not use abrasive cleaners, as the finish may be damaged by those cleaners.
- To clean interior walls, use a damp cloth and a mild liquid soap solution or a spray solution on a sponge. Never use harsh abrasive or corrosive products on interior of oven.
- Wipe the outside of the oven with a damp cloth or sponge and dry thoroughly.
- Do not put the air fry basket, bake pan or oven rack in the dishwasher. Accessories are not dishwasher safe. To clean those accessories, you can wash in soapy water and a soft sponge.
- There is no need to clean the heating elements. Any food residues or grease that are in contact with the heating elements will burn off on its own.
- Make sure the appliance is unplugged and all parts and accessories are clean and dry before storage.
- Never wrap the cord around the outside of the oven.
- Any other servicing should be performed by an authorized service representative.

TROUBLESHOOTING

PROBLEM	POSSIBLE SOLUTION
The oven does not turn on	1. Check that the oven is properly plugged into the power supply. 2. The Timer is not set, rotate the Timer knob to the desired time.
The food is undercooked after recommended time	1. Too much food has been added to the oven, cook less food. 2. Temperature was set too low. 3. Make sure the correct temperature knob is used. Only use Air Fry Knob when you are using air frying function. For all other function, using Temperature knob.
The food is not cooked evenly	1. Too much food in the oven. 2. The food items are placed too closely together. 3. Some foods require flipping halfway through the cooking time to ensure even browning.
Heater elements turn off during cooking	The heating elements will turn on and off to control the temperature, this is not a malfunction.
White smoke is coming out of the oven.	1. The oven may produce white smoke slightly when you use it for the first time. This is normal. 2. Excess oil or fatty foods may produce white smoke. Make sure the inside of the oven is cleaned properly and not greasy.
The food is not crispy after using Air Fry function	The crispiness of food depends on the amount of moisture and oil in the food; to enhance crispiness, dry the food properly or oil the food surfaces.

Please don't return it to the store! Let us help you first!
Service@weesta.net

Recommended Cooking Guide

Food	Function Setting	Recommended Amount	Cooking Time	Recommended temperature	Recommended Accessories	Rack Position
French Fry	Air Fry	400g	18-22 Minutes	400°F	Air Fry Basket	Middle
Chicken Nuggets	Air Fry	450g	10 Minutes	400°F	Air Fry Basket	Middle
Fresh Wing	Air Fry	900g	13-16 Minutes	450°F	Oven Rack	Middle
Frozen Wing	Air Fry	650g	15-18 Minutes	450°F	Oven Rack	Middle
Popcorn chicken	Air Fry	600g	15 Minutes	450°F	Air Fry Basket	Middle
Beef steak	Air Fry	650g	10 Minutes	400°F	Oven Rack	Middle
Bread	Toast	Light:4 slices Middle:4 slices Dark:4 slices	3.5-6 Minutes	450°F	Oven Rack	Middle
Pizza (8 inch)	Bake	400g	10 Minutes	400°F	Oven Rack	Middle

Tips for daily use

- Distributing oil on foods and ingredients can enhance exterior crispiness and browning.
- Oil can also be sprayed or brushed onto foods for air frying. A non-stick cooking spray can also be used to ensure that fried foods do not stick on the Baking Pan or Air Fry Basket.
- Using aluminium foil on Baking Pan for easy cleanup.
- Arranging the food in single layer in the Air Fry Basket to avoid the need to toss or flip food during cooking. Overcrowding the basket may negatively impact food texture and prolong the cooking cycle.
- This oven can also be used to reheat food. To reheat foods, rotate the Temperature Knob to 300°F for up to 10 minutes.
- The exterior surfaces of the oven can be hot during and after use. To facilitate cooling, set the function to Defrost and rotate the Timer knob to approximately 5 minutes to activate the convection fan.

Need help? Contact Customer Support
Service@weesta.net

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

- Read all instructions.
- **Unplug from outlet when not in use and before cleaning.**
- **Allow to cool completely before cleaning or handling.**
- Only use the appliance on a stable and dry surface.
- Do not use appliance for other than its intended use.
- **This Oven is for household use only.**
- Do not use appliance outdoors or for commercial purposes.
- Make sure the appliance is cleaned thoroughly before using.
- Close supervision is necessary when the appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- **Never leave appliance unattended when in use.**
- Remove all bags and packaging from appliance before use.
- Do not allow the appliance to be covered by or touch flammable materials such as curtains, draperies or walls when in operation. Do not store any items on top of the appliance when in operation. Do not operate under wall cabinets.
- To avoid burns, use extreme caution when removing accessories or disposing of hot grease.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Improper use of the appliance can result in property damage or even in personal injury.
- Do not store any materials other than manufacturer recommended accessories in this appliance.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- Always be sure to unplug the appliance from the outlet prior to moving, cleaning, storage and when not in use.
- Do not attempt to dislodge food when the appliance is plugged into electrical outlet.
- Oversize foods, metal foil packages and utensils must not be inserted in the oven as they may involve a risk of fire or electric shock.
- Do not clean with metal scouring pads.
- Use recommended temperature settings for all cooking/baking, broiling and air frying.
- Do not place appliance on or near a hot gas burner, hot electric burner or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect turn any control to" Off ", then remove plug from wall outlet.
Do not let the cord touch hot surfaces, or hang over the edges of tables or counters.

Please don't return it to the store! Let us help you first!
Service@weesta.net

- Do not place any of the following materials in the oven: paper cardboard, plastic and similar products.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in electric shock, or personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modified plug in anyway.
- Do not cover any part of the oven with metal foil. This will cause overheating of the oven.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet.
- Never pull from the power cord.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Weesta shall not accept liability for damages caused by improper use of the appliance.
- The exterior surfaces of the appliance can be hot during and after oven operation. Allow appliance to cool completely before handling.

-  caution, hot surface.


Special Cord Set Instructions:

- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- An extension cord may be used if care is exercised in its use.
- If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
- The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- If the appliance is of the grounded type the cord set or extension cord should be a grounding-type 3-wire cord.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.


Need help? Contact Customer Support
Service@weesta.net

CONVECTION

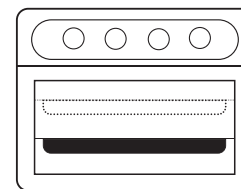

Convection

 
Place the Drip Tray at the bottom of your oven (below the heating element).
Place the Baking Pan or Oven Rack at position 1 or 2 for Convection

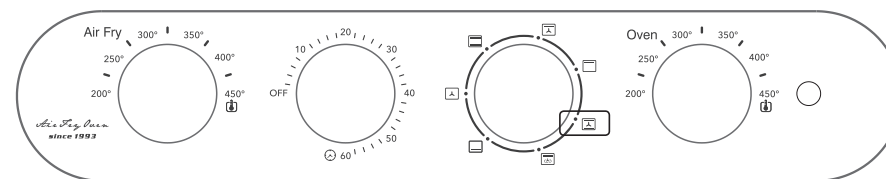

- 1** Close the oven and set Function Knob to Convection; Rotate your Temperature Knob to the desired temperature.
- 2** Rotate the Timer Knob to the desired cooking time to turn on the oven.
- 3** The Power Indicator will illuminate. The Timer will ring when the cooking is complete.
- 4** To stop convection, rotate the Timer Knob anticlockwise to "Off" position.

Please don't return it to the store! Let us help you first!
Service@weesta.net

BROILING / CONVECTION BROILING

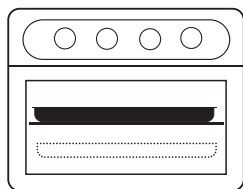


Broiling/Convection Broiling

Place the Drip Tray at the bottom of your oven (below the heating element.)
Place your Air Fry Basket or Baking Pan in the Air Fryer Oven at Position 2 for Broiling.

Convection Broil is similar to **Broil**, but will activate the convection fan to circulate hot air around the food, which will make the cooking faster.

NOTE: Make sure to place the Air Fry Basket on your Oven Rack.

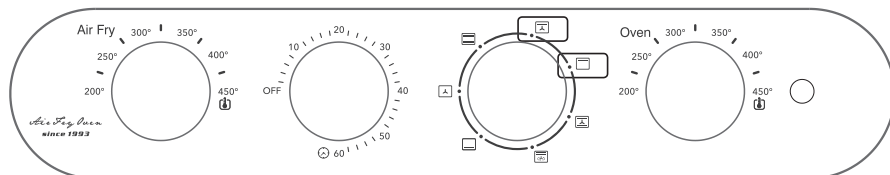


- 1 Close the oven and set Function Knob to Broil or Convection Broil; Rotate your Temperature Knob to the desired temperature.
- 2 Rotate the Timer Knob to the desired cooking time to turn on the oven.
- 3 The Power Indicator will illuminate. The Timer will ring when the cooking is complete.
- 4 To stop broiling, rotate the Timer Knob anticlockwise to "Off" position.

Need help? Contact Customer Support
Service@weesta.net

PARTS & FEATURES

CONTROL PANEL

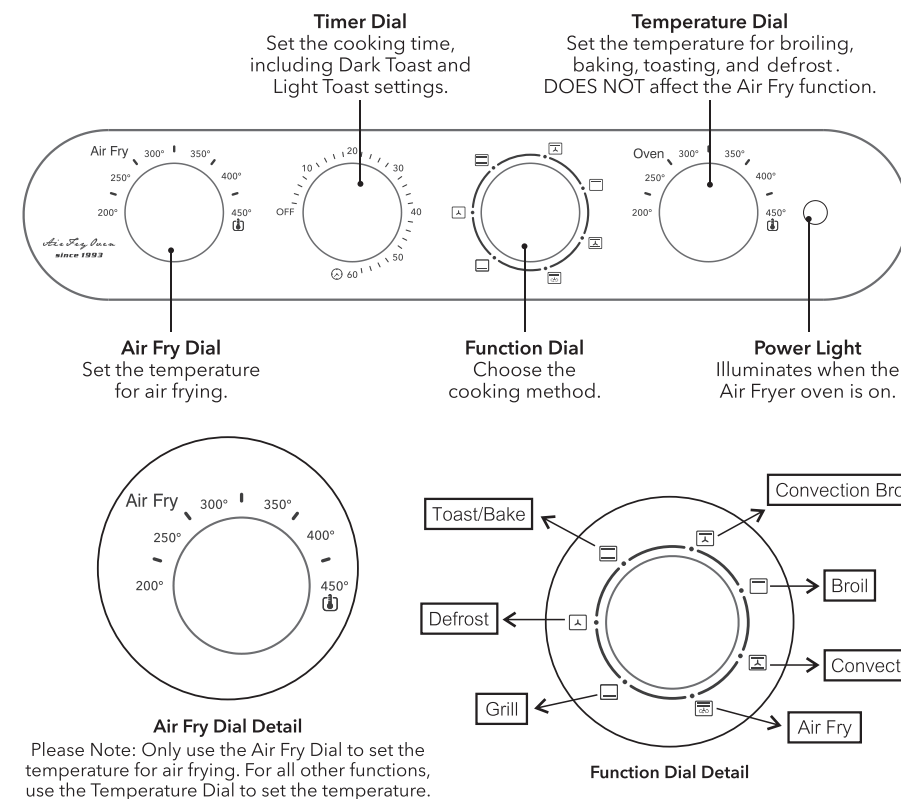

Please don't return it to the store! Let us help you first!
Service@weesta.net


PARTS & FEATURES

NOTE: See diagram in "Using Your Everyday Air Fryer Oven" for position details.



Baking Pan

Use alone when baking/toasting ingredients. See diagram for position details.

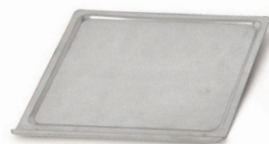

Drip Tray

Use when air frying, baking or broiling to collect drips or crumbs. See diagram for position details.



Oven Rack


Use for toasting and broiling. See diagram for position details.




Air Fry Basket

Use the Air Fry Basket with the Air Fry function and Oven Rack to optimize your results. See diagram for position details.

BAKING AND TOASTING

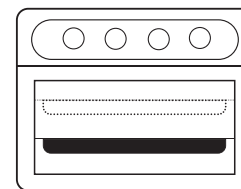


Baking

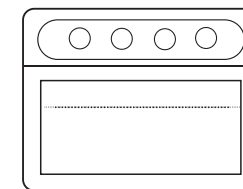

Toasting

Place the Drip Tray at the bottom of your oven (below the heating element.)
For Baking, place the Oven Rack at Position 1 or 2 depending on sizes of food
For Toasting, place oven rack at Position 2

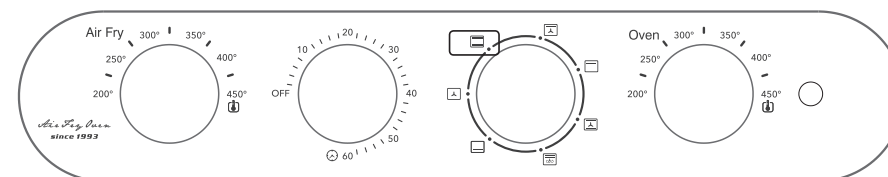


- 1 Close the oven and set Function Knob to Baking and Toasting; Rotate your Temperature Knob to the desired temperature.
- 2 For Baking, rotate the Timer Knob to the desired cooking time to turn on the oven.
For Toasting, Set the timer to approximately 3 minutes if light toast is needed, or set the timer to approximately 7 minutes if dark toast is needed.
- 3 The Power Indicator will illuminate. The Timer will ring when the cooking is complete.
- 4 To stop baking or toasting, rotate the Timer Knob anticlockwise to "Off" position.

Need help? Contact Customer Support
 Service@weesta.net


Please don't return it to the store! Let us help you first!
 Service@weesta.net

GRILLING/DEFROST

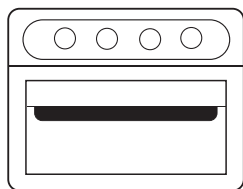

Grilling/Defrost

 **Place the Drip Tray at the bottom of your oven (below the heating element.)
Place the Baking Pan or Oven Rack at position 2 for Grilling/Defrost.**

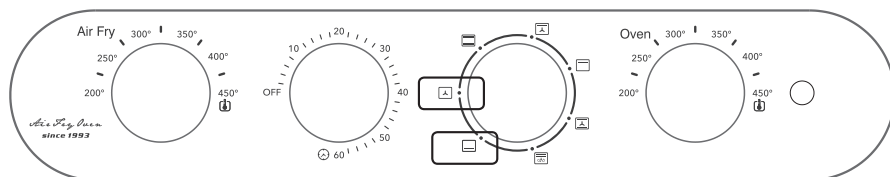

Defrost:

For Defrost, set the Function Knob to Defrost, and then rotate the Timer Knob directly (no need to rotate the Temperature Knob). The Defrost will only activate the convection fan to enhance the air flow inside the oven cavity so as to help defrost foods.

Grilling:

- 1 Close the oven and set Function Knob to Grill; Rotate your Temperature Knob to the desired temperature.
- 2 Rotate the Timer Knob to the desired cooking time to turn on the oven.
- 3 The Power Indicator will illuminate. The Timer will ring when the cooking is complete
- 4 To stop grilling, rotate the Timer Knob anticlockwise to "Off" position.

Need help? Contact Customer Support
Service@weesta.net

USING YOUR EVERYDAY AIR FRYER OVEN

BEFORE USING YOUR EVERYDAY AIR FRYER OVEN:

Remove all packaging materials.

Before using, move the Everyday Air Fryer Oven 2 to 4 inches away from the wall or from any objects on the countertop. Do not use on heat-sensitive surfaces.

Check that the Air Fryer Oven has no visible damage and that no parts are missing.

Before using the Air Fryer Oven for the first time or before using it after prolonged storage, wash and dry the appliance and any accompanying accessories. See "Cleaning & Maintenance" for instructions.



NOTE: The first time you use the Air Fryer Oven you may notice a smell or a slight light smoke. This should only last for 15 minutes. It is important to run the appliance on Air Fry before using, without food.

USING YOUR EVERYDAY AIR FRYER OVEN:


The following section will help familiarize you with the different accessories that come with your Everyday Air Fryer Oven and how to use them.

Please don't return it to the store! Let us help you first!
Service@weesta.net

USING YOUR EVERYDAY AIR FRYER OVEN


RACK POSITIONS

NOTE: Before use, place the Drip Tray beneath the heating element at the bottom of the Air Fryer Oven. Do not rest any accessories directly on top of the heating element.

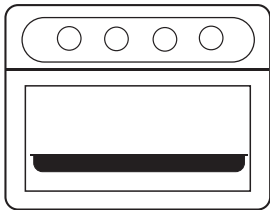


POSITION 1: BAKING LARGE ITEMS

Place the Baking Pan in the lowest placement.

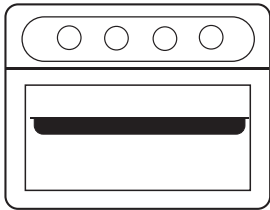


POSITION 1: BAKING SMALL ITEMS

Use the Baking Pan in the middle placement for baking smaller items.

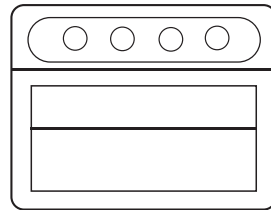

POSITION 2: TOASTING


Use the Oven Rack in the middle placement.

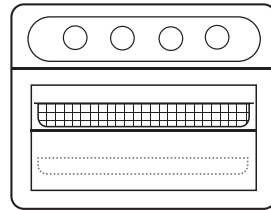

POSITION 2: BROILING & AIR FRYING


Use the middle placement with the Oven Rack and Air Fry Basket. **NOTE:** For items that are greasy or might drip, place the baking pan beneath the Air Fry Basket in Position 1.

AIR FRYING

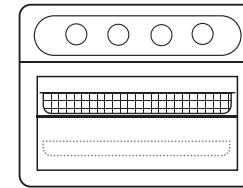

Air frying

Place the Drip Tray at the bottom of your oven (below the heating element.)
Place the Air Fry Basket onto your Oven Rack at Position 2 for Air Frying/Broiling.
Note: For greasy foods like wings, place the Baking Pan below the Air Fry Basket to catch drips.

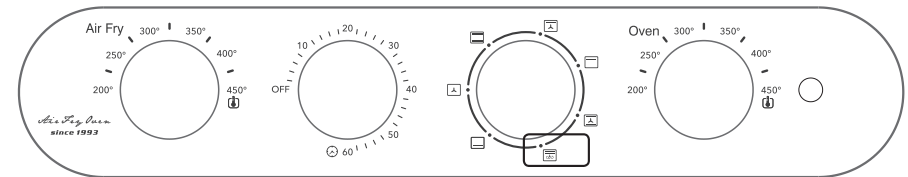

- 1 Close the oven and set your Function Knob to Air Fry.
- 2 Set your Air Fry Knob to the correct temperature. **The Air Fry Knob only works with the air fry function.** The temperature shown on the Temperature knob does not affect the Air Fry Knob setting.
- 3 Then, turn the Timer Knob to the desired cooking time to turn on the oven and begin air frying.
- 4 The Power Light will illuminate. The Timer Knob will when the cycle is complete.
- 5 To stop air frying, turn the Timer Knob to the "Off" position.

Need help? Contact Customer Support
Service@weesta.net

Please don't return it to the store! Let us help you first!
Service@weesta.net